


1. Prepare a USB disk (USB drive)

2. Right click and select format... Format U disk to FAT32 format, and change the Volume label to WINPE, click start to finish formatting

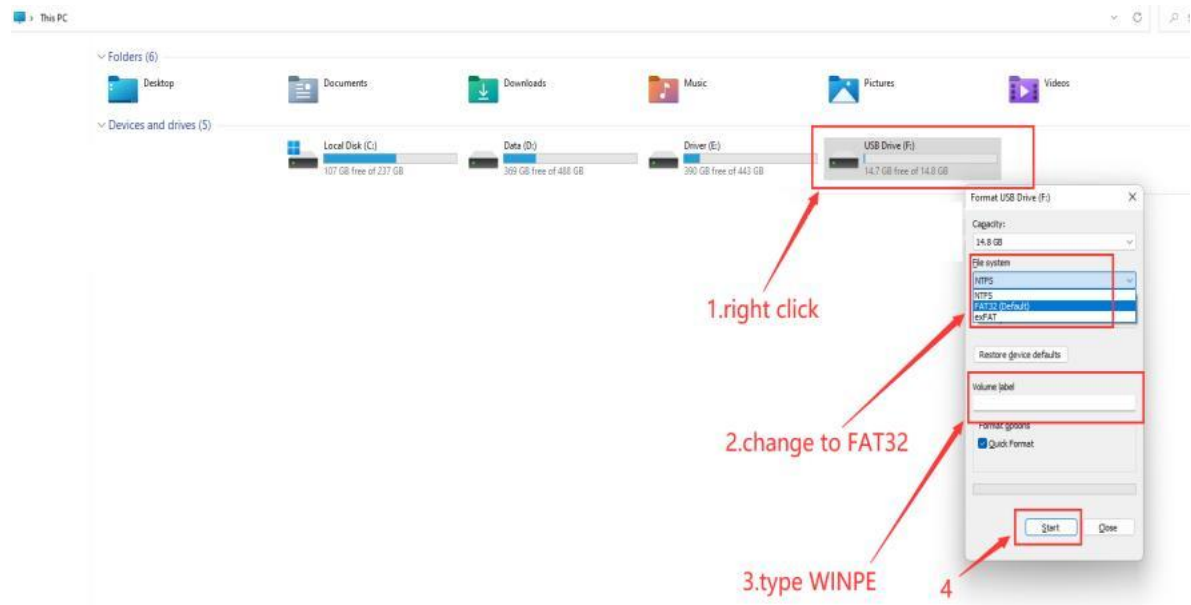


3. Copy the files to USB disk as below, and it must be in the root directory of USB disk.

(The specific file is subject to the file you open, and the following just a sample)

Name	Date modified	Type	Size
Yesterday			
Flash.nsh	3/12/2026 5:33 PM	NSH File	1 KB
AfuEfix64.efi	3/12/2026 5:24 PM	EFI File	615 KB
AfuEfix64_5.14.02.0026.efi	3/12/2026 5:24 PM	EFI File	556 KB
EFI	3/12/2026 5:24 PM	File folder	
Last month			
HPT.8xxx.SER8.V035.P8COMOC15.15.BL.20260224.bin	2/24/2026 4:25 PM	BIN File	32,768 KB

4. Restart the computer, press **F7** repeatedly on the boot logo interface, and select **USB** boot/partition in the boot options, press enter. Note: Please disable secure boot in BIOS before flashing the BIOS.

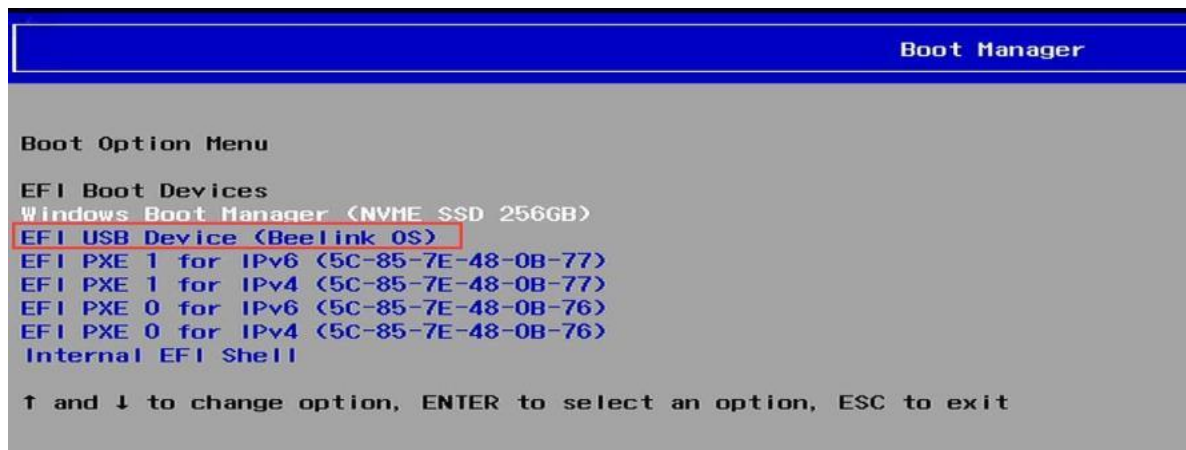


5. BIOS will automatically start flashing. PC will restart after the update is completed.

WARNING! System firmware is being updated.
Keyboard is locked.
DO NOT TURN THE POWER OFF !!!
Once firmware update is completed
system will be automatically rebooted

PSP NCB Update Progress

PHX BIOS DIR L2A

51%



Screen
Item
ct
Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defau
F4: Save & Exit
ESC: Exit